USER GUIDE

Nitrate Water Test Kit


Be sure to remember


- 1. Make sure the vial is clean or wash the test vial properly before the test.
- 2. To get maximum accuracy always place the test sample vial against white background.
- 3. Test the samples immediately after collecting it from the source.


Directions for Testing Nitrate Levels

- Take 4ML water in vial 1.
- 2. Add 5 drops Nitrate Reagent 1
- 3. Add 5 drops Nitrate Reagent 2
- 4. Add 5 drops Nitrate Reagent 3
- 5. Caped the Vial and shake vigorously for 20 seconds
- 6. Wait for (5) minute
- 7. Match the vial colour only from provided

TRM Nitrate Colour Card





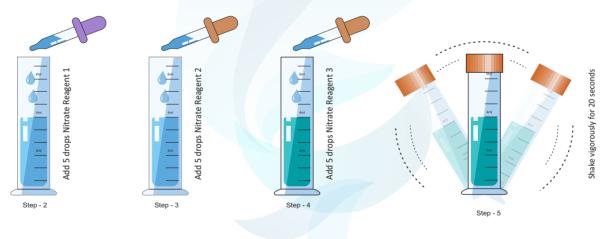

TRM Nitrate Colour Card

Wait for (5) minute

Note: DO NOT hold finger over the open end of the tube, as this may affect the test results. Wait 5 minutes for the colour to develop. See the test results by matching the test solution against The Nitrate Test Colour Chart.

